




HOW TO INSTALL RAINDROP MOSAIC

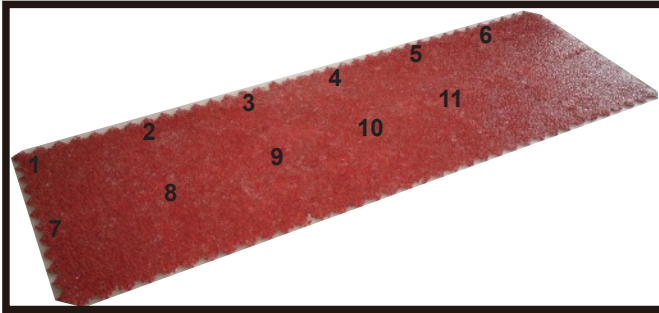

Pre-lay: Sheets are packed in the boxes according to a pre-laid numbered pattern by the factory.

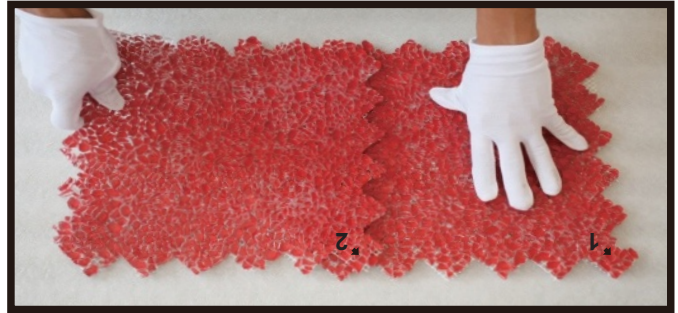

Step 1: Arrange all mosaic sheets with the corner tag pointing to the same direction. Follow wherever possible the factory's pre-laid numbering sequence.

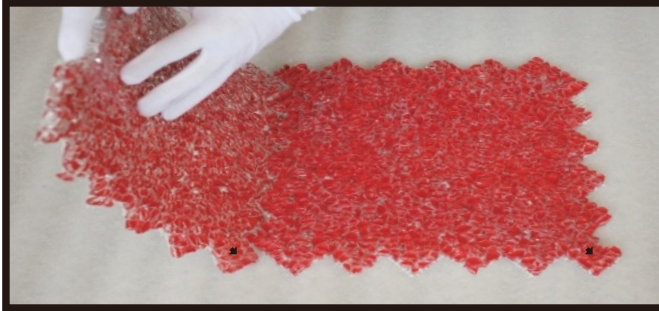


Step 2: Having determined your starting point and installed the first sheet, continue the installation by adding each consecutive sheet. To do this firmly interlock the connecting edges, while still holding the new sheet away from the adhesive.



Step 3: Keep the sheet in a convex shape, slowly feed the sheet onto the adhesive; this will prevent an excessive amount of adhesive getting caught in the joint.



Step 4: Once the new sheet is flat and attached to the substrate, push the sheet towards the previous one to minimise the joint opening.

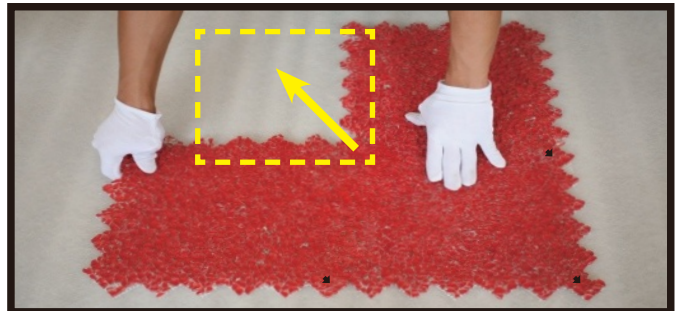

Step 5: When working two adjoining sheets, always approach at an angle from the fixed two edges.




Step 6: Continue installation until the recommended maximum adhesive area covered (usually $< 1 \text{ m}^2$ at a time). Carefully inspect and adjust joints between the installed sheets.



Step 7: Collect small mosaic pieces from a sacrificial sheet.



Step 8: Use pieces obtained from Step 7 to fill any noticeable openings at the joints. Repeat this until all mosaic sheet are seamless.

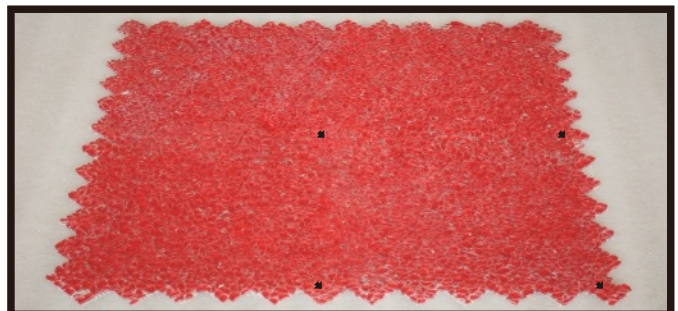

Step 9: The image above depicts the Raindrop mosaic correctly assembled.

* FOR BEST INSTALLATION RESULTS WE RECOMMEND USING MATCHING COLOUR GROUT